


LEGEND

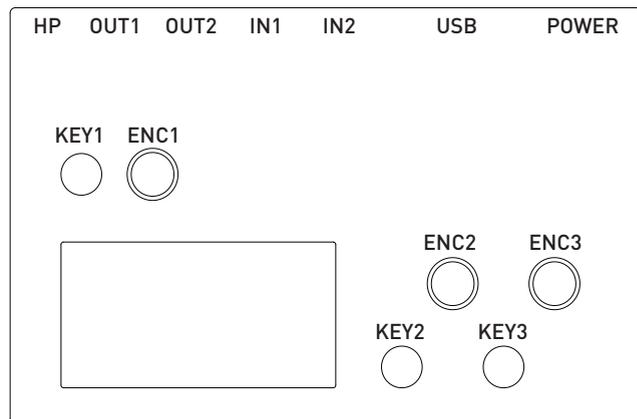

BEGIN

The mini-USB plug provides power and charges the internal battery. Use the cable and power supply provided.

Hold KEY1 for three seconds.

Be still, and norms will awaken.

There's a small light near the power plug.
ORANGE means power. WHITE means disk access.

AWAKE

A changing melody will play.

ENC1 changes the tempo.
ENC2 navigates position, ENC3 changes position.
KEY3 toggles the sequence to edit.
KEY2 morphs the current sequence.

HOLD KEY3
ENC1 changes transposition.
ENC2 and ENC3 change sequence lengths.
KEY2 resets sequence positions.

HOLD KEY1
ENC1 changes scale mode.
ENC2 changes filter cutoff.
ENC3 changes release time.

TAP KEY1 quickly to enter MENU.

FURTHER

<http://monome.org/docs/norns>

SELECT

Explore the collection of scripts.
Selecting a script will show a description.
Forward again will run the script.
The play screen will return upon running.
Tap KEY1 to toggle between PLAY and MENU.

PARAMETERS

Scripts can define their own parameters.
ENC3 changes parameter values.
HOLD KEY1 and then use KEY2 and KEY3 to save/load parameter sets.

SYSTEM / AUDIO

Like the parameter list, but for the global audio settings. Includes output and input levels, headphone gain, aux send (reverb), and insert (compression).

SYSTEM / WIFI

The WIFI nub must be inserted before starting. Here you can set up a hotspot or connect to an existing network.

SYSTEM / SYNC

A USB disk must be connected. Here you can sync your scripts/data/audio to an external disk, or copy scripts/audio/data from an external disk.

SYSTEM / UPDATE

This searches the USB disk for update files.

SYSTEM / LOG

Displays the day's news.

SLEEP

Powers down, getting rest for later.

LEVELS

Go BACK from home to see the LEVELS screen. Here you have VUs and mixing capabilities.

ENC1 output
ENC2 input
ENC3 monitor (input to output)

TAPE

Within LEVELS you can record and play directly to and from disk.

HOLD KEY2 for all. ENC3 toggles REC/PLAY.

REC	PLAY
KEY3 to arm recording.	KEY3 loads file.
KEY3 again to start.	KEY3 to play.
KEY3 again to stop.	ENC3 to toggle PLAY/STOP.

MENU

You begin at home.
You end at home.

ENC2 scrolls up/down.
KEY3 is forward.
KEY2 is back.

